


WIRING

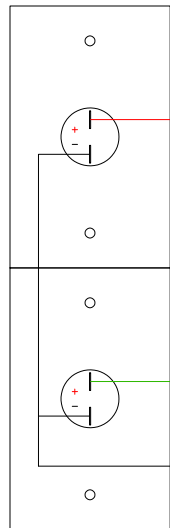


APPLY 9-30VDC FOR STEADY
OPERATION DANGER STATUS


APPLY 9-30VDC FOR STEADY
OPERATION SAFE STATUS

APPLY VDC RETURN TO
COMPLETE SIGN STATUS LOOP.


SIDE

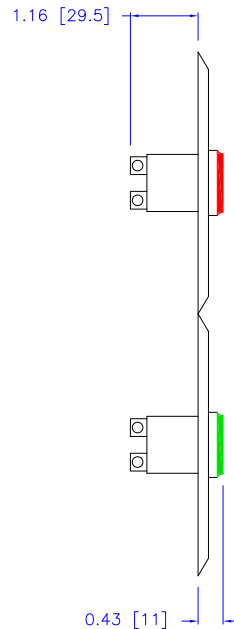

FRONT

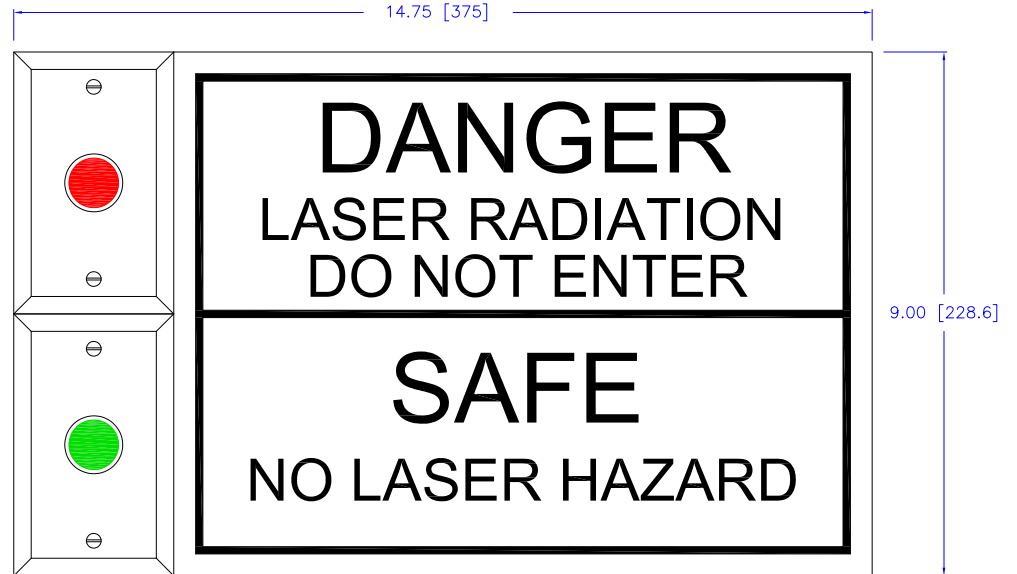

BOTTOM



TB1 ETG-CP
ENTRY GUARD
CONTROL PANEL

NOTES:

1. ALL DIMENSIONS IN INCHES [mm].
2. TWO SINGLE-GANG KNOCKOUT BOX COMPATIBLE.
3. RED LED INDICATOR LIGHT, RATED 0.13A @9-30V dc.
4. GREEN LED INDICATOR LIGHT, RATED 0.13A @ 9-30V dc.
5. RECOMMENDED 18-22 GAUGE STRANDED WIRE.



5 Jarado Way
Boscawen, NH 03303
Phone: 800-432-2323
Fax: 603-435-7441
info@kenteklaserstore.com

THIS DOCUMENT AND ITS CONTENTS INCLUDING DRAWINGS, DIMENSIONS AND SPECIFICATIONS ARE PROPRIETARY TO KENTEK CORPORATION AND SHOULD NOT BE REPRODUCED, COPIED, OR DISSEMINATED IN WHOLE OR IN PART WITHOUT THE WRITTEN PERMISSION OF KENTEK CORPORATION. KENTEK CORPORATION ASSUMES NO RESPONSIBILITY FOR ACTUAL OR CONSEQUENTIAL DAMAGE INCURRED AS A RESULT OF ANY USER'S RELIANCE ON THIS DOCUMENT OR THE PRODUCTS DESCRIBED HEREIN.

DRAWING NUMBER: 2605-05

REV: B

TITLE: ENTRY-GUARD™ DUAL STATUS SIGN

PART NUMBER: ETG-DLS-WP