


# ENTRY-GUARD™ (P/N: ETG-BPS)

Entry-Guard™ curtain bypass key switch. External key switch for applications that require a curtain door interlock to be bypassed to allow use of an entire room. Wire in parallel across interlock terminals then select interlock status by turning the key on or off.

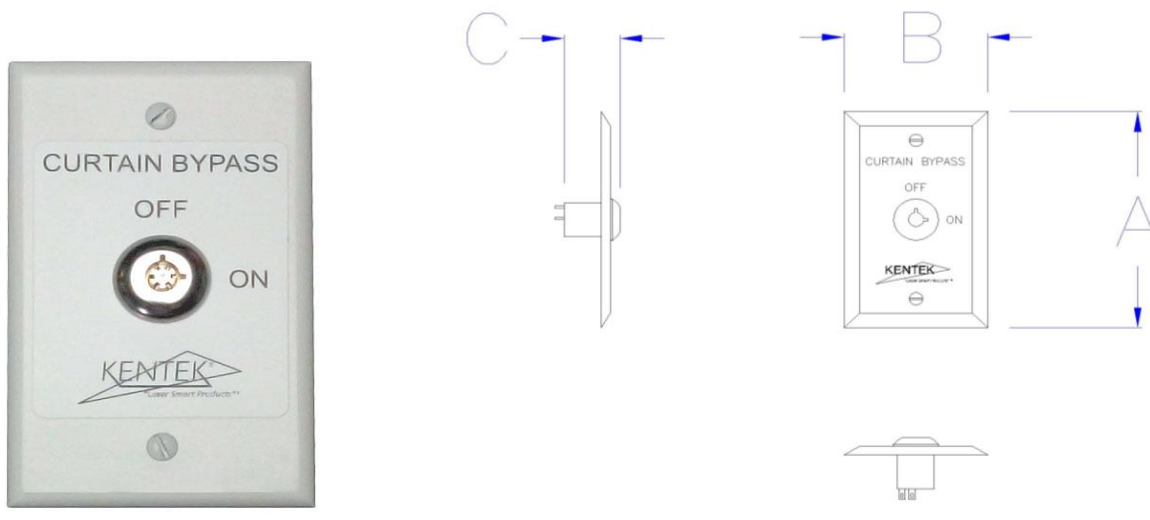

- Bypass any safety interlock to accommodate room consolidation, or test mode
- Single gang outlet mounting compatible
- Custom labeling available for entryway doors, enclosure doors or access panels interlocks

Specifications	
<b>Outside Dimensions</b>	A = Height: 4.50" [114.3mm]
	B = Width: 2.75" [69.8mm]
	C = Depth: 2.75" [69.8mm]
<b>Mounting Pattern</b>	Single gang outlet box compatible
<b>Rated Voltage</b>	125 VAC / 20 VDC (recommended 5 to 28 VDC)
<b>Rated Current</b>	4 amps AC/DC (recommended < 0.5 amps)
<b>Connection</b>	(2) Solder terminals for use with 20-24 gauge wire
<b>Weight</b>	0.25 lbs [0.11 kgs]

**KENTEK CORPORATION** 32 Broadway • Pittsfield, NH 03263 USA

Tel: 1 800-432-2323 Fax: 1 603-435-7441 Web: [kenteklaserstore.com](http://kenteklaserstore.com) Email: [info@kenteklaserstore.com](mailto:info@kenteklaserstore.com)